




LODOVICO


divani
.store

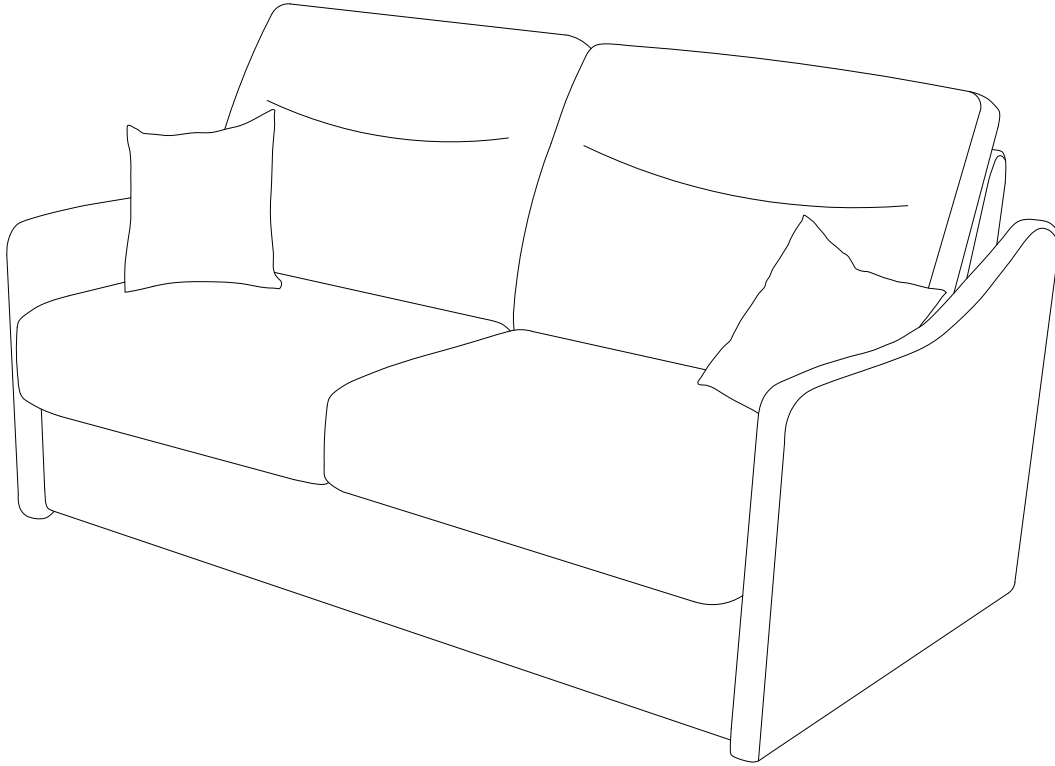


x2

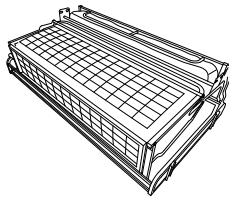


x1

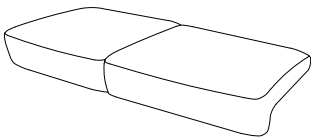


x1

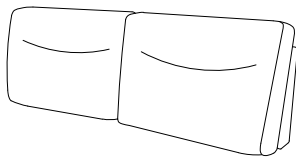


x1

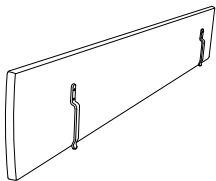


x1

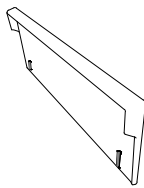


x1

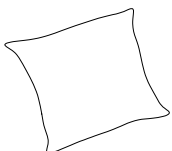


x2




A x 4



B x 4
M10




Spanner x 1
17mm



Not include


STEP 1

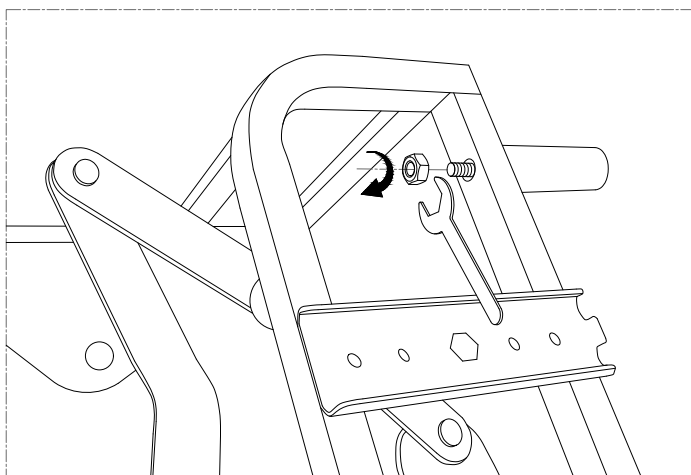


A x 4




B x 4
M10

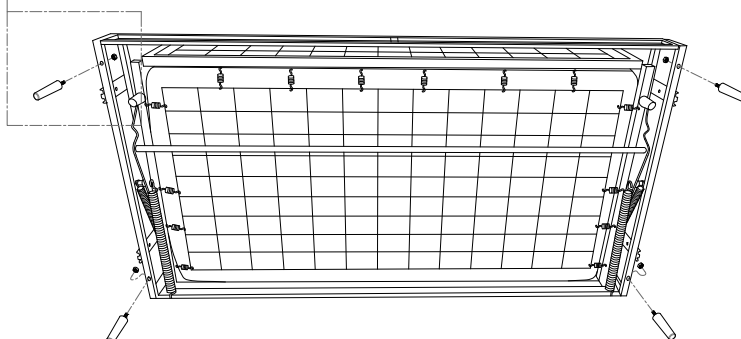


STEP 2

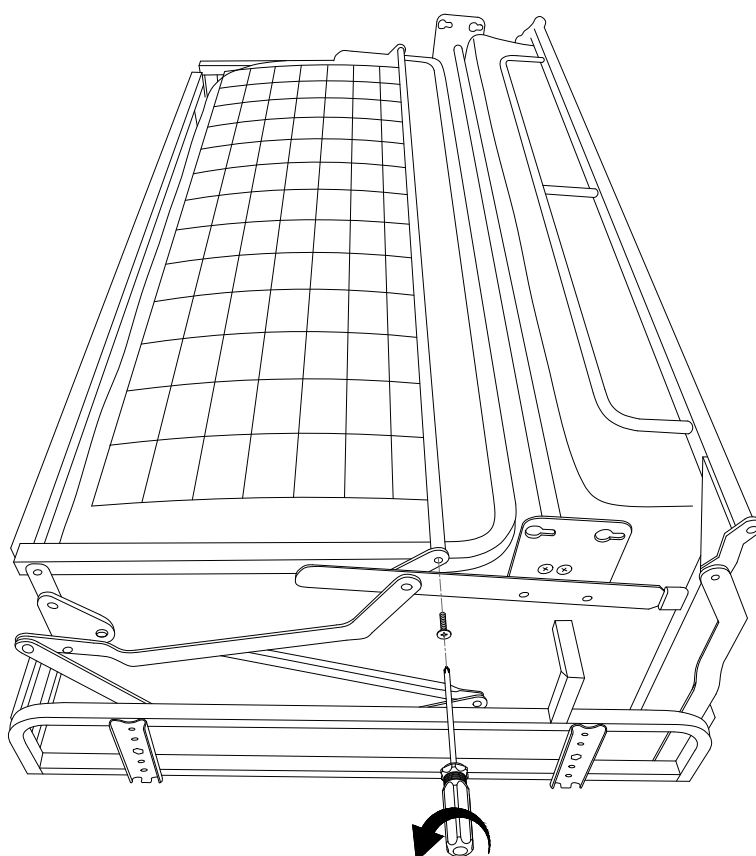


STEP 3

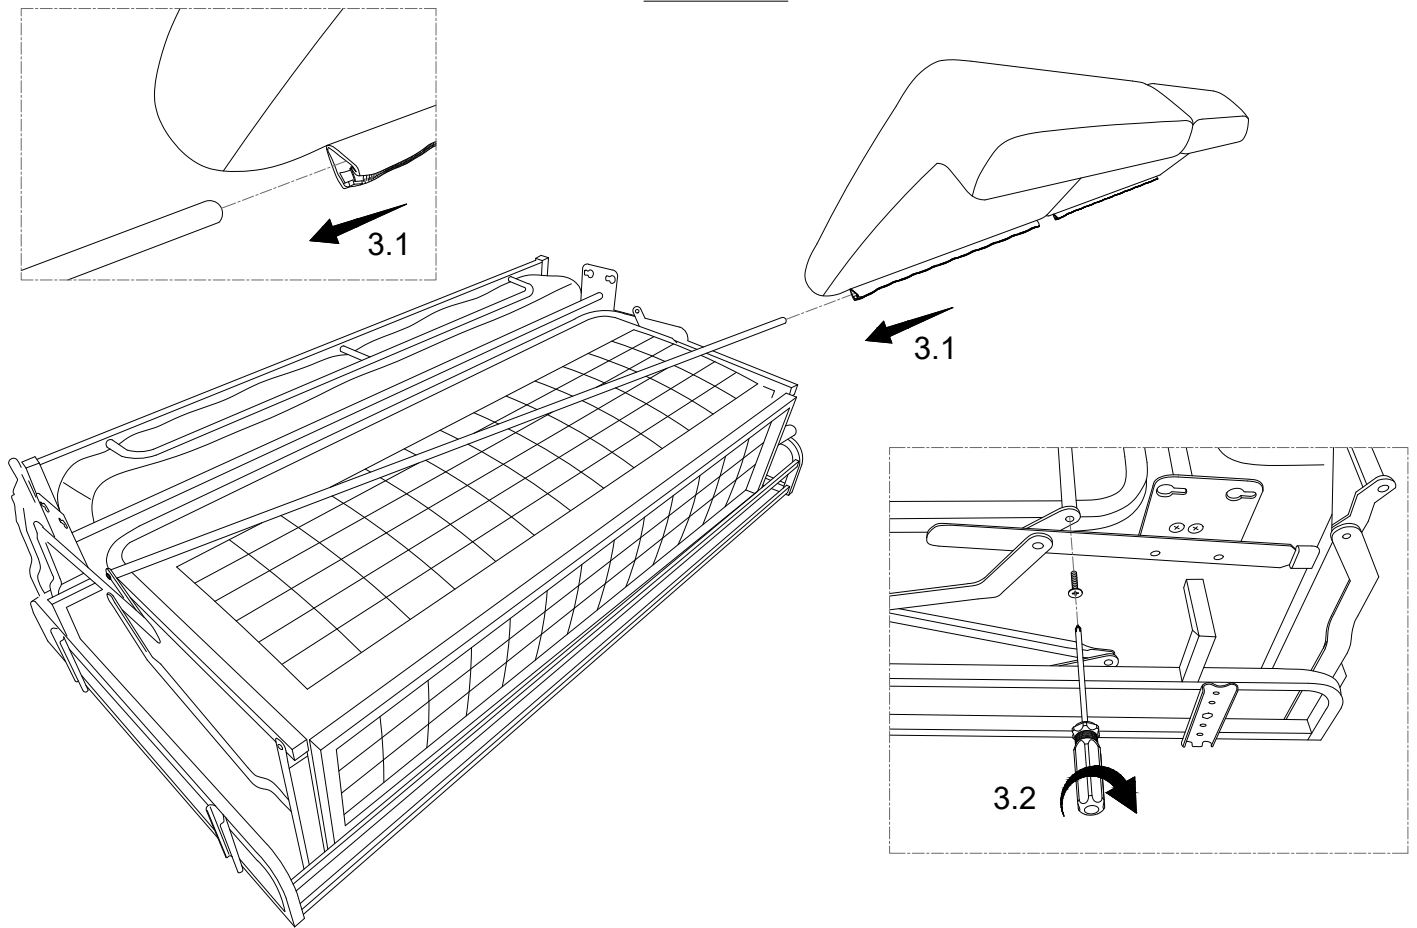


STEP 4

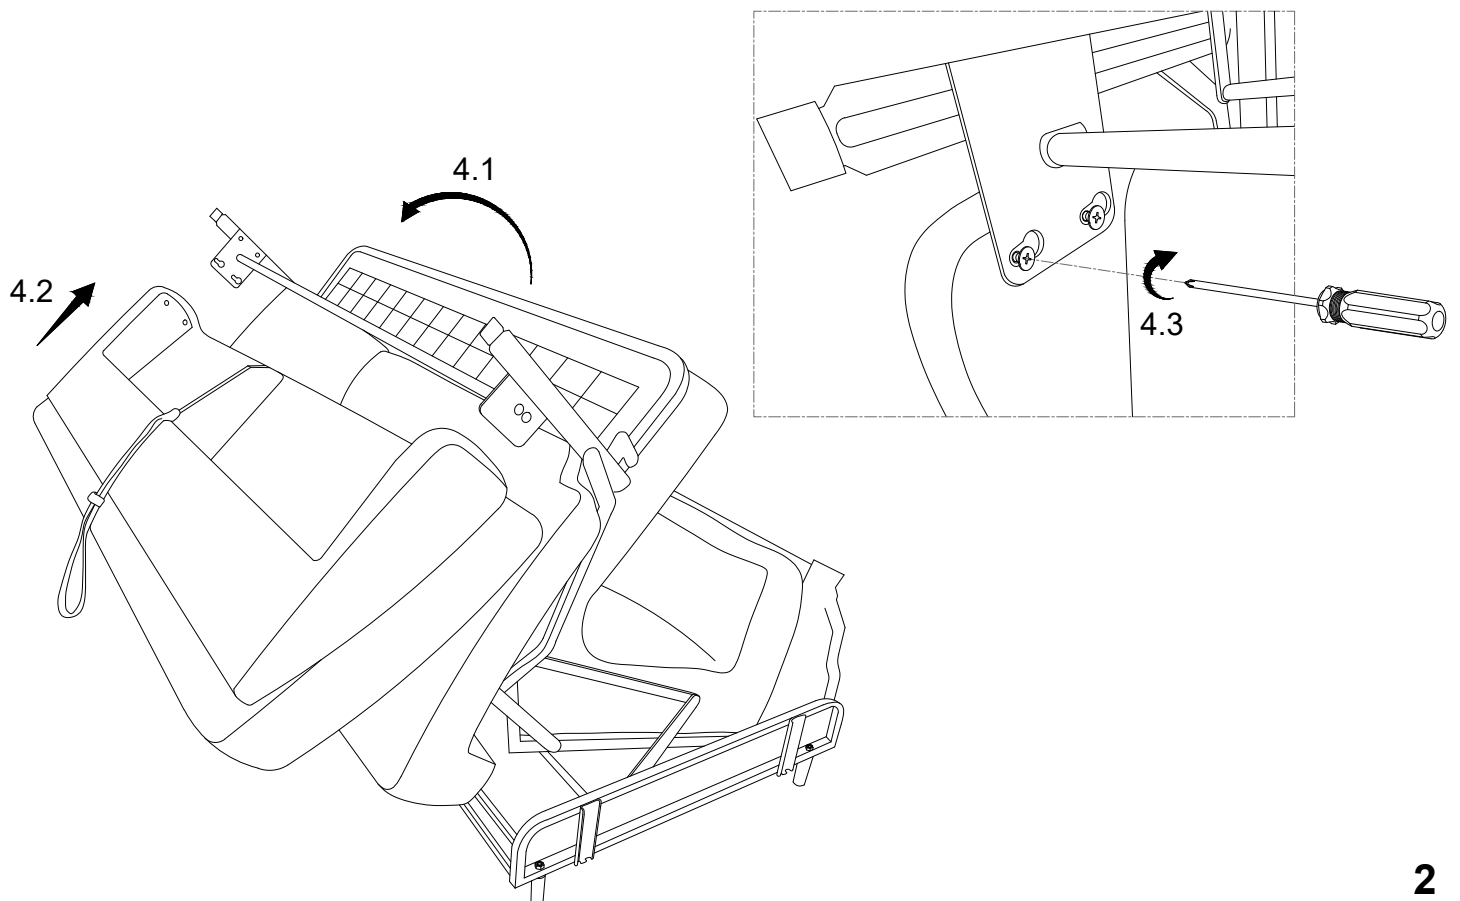


STEP 5

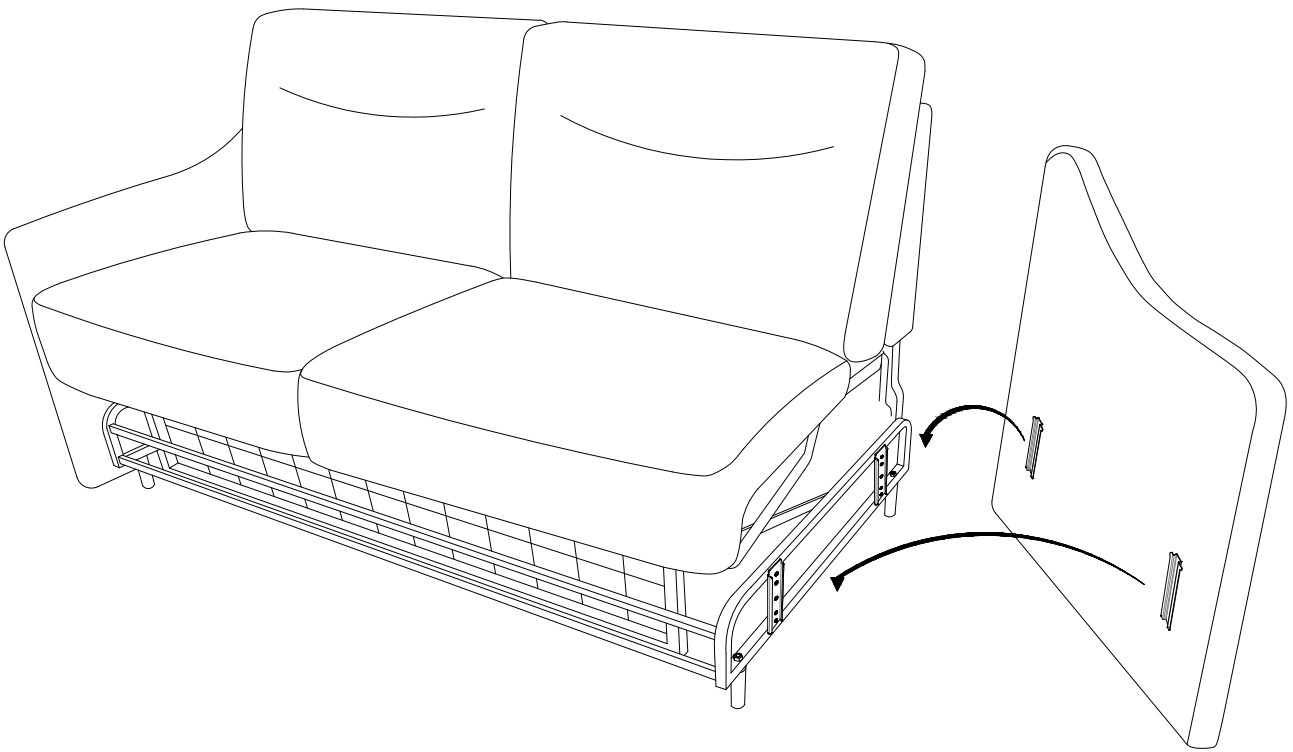



STEP 6

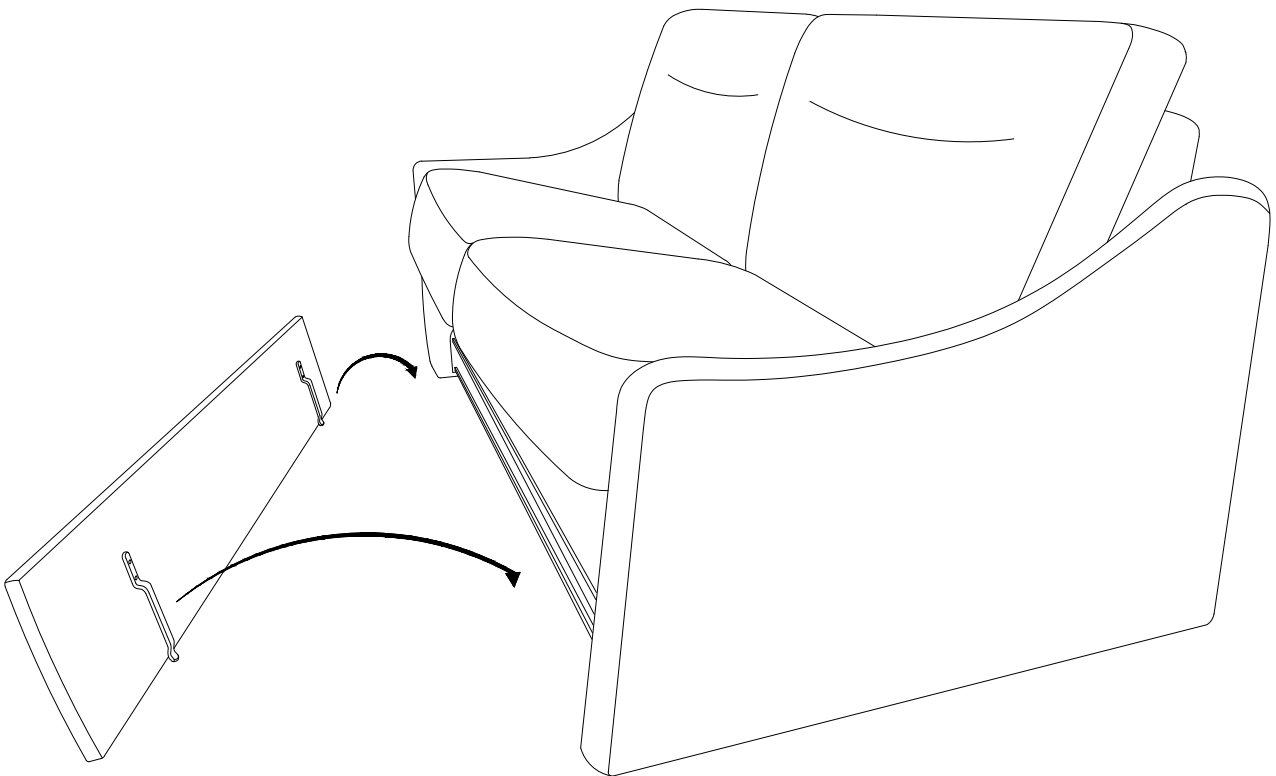

STEP 7

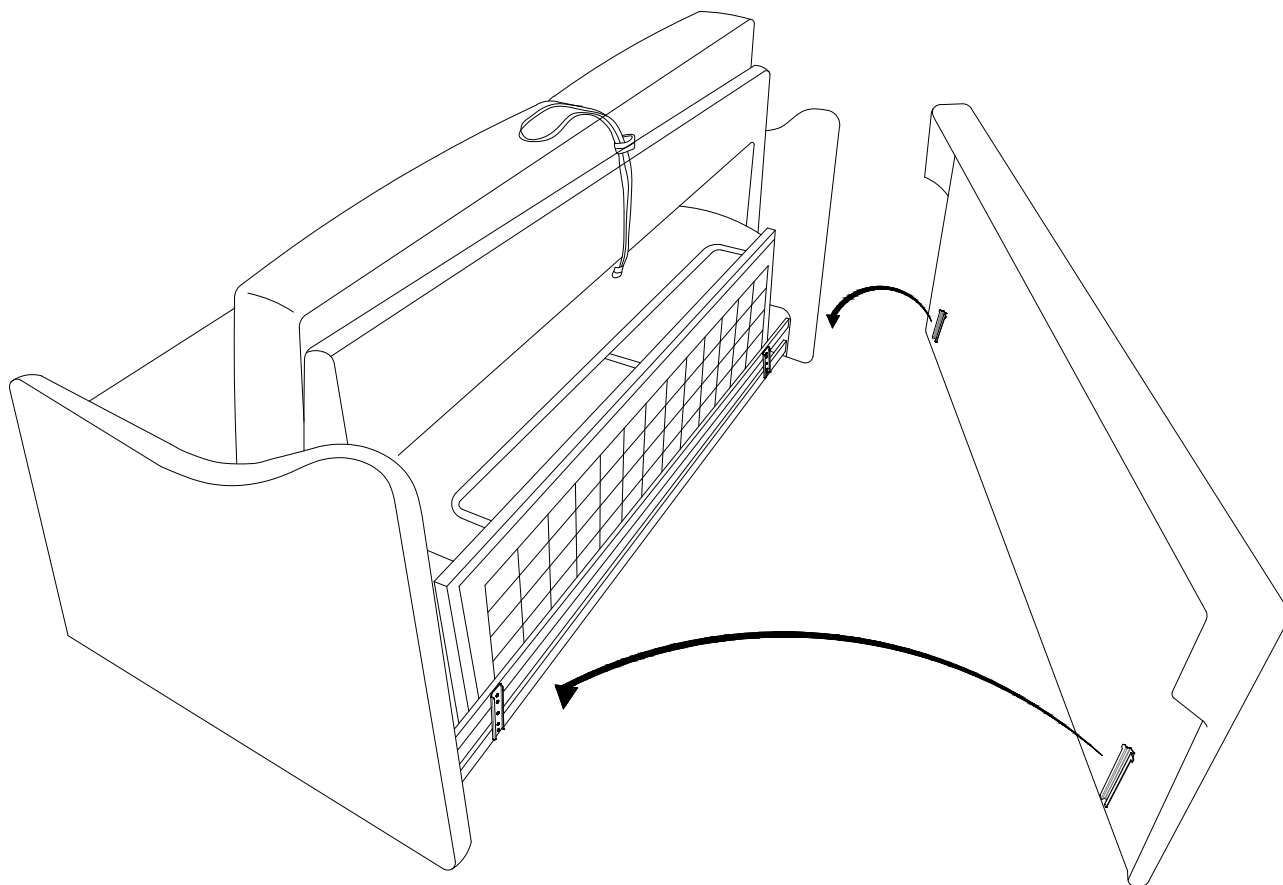

STEP 8

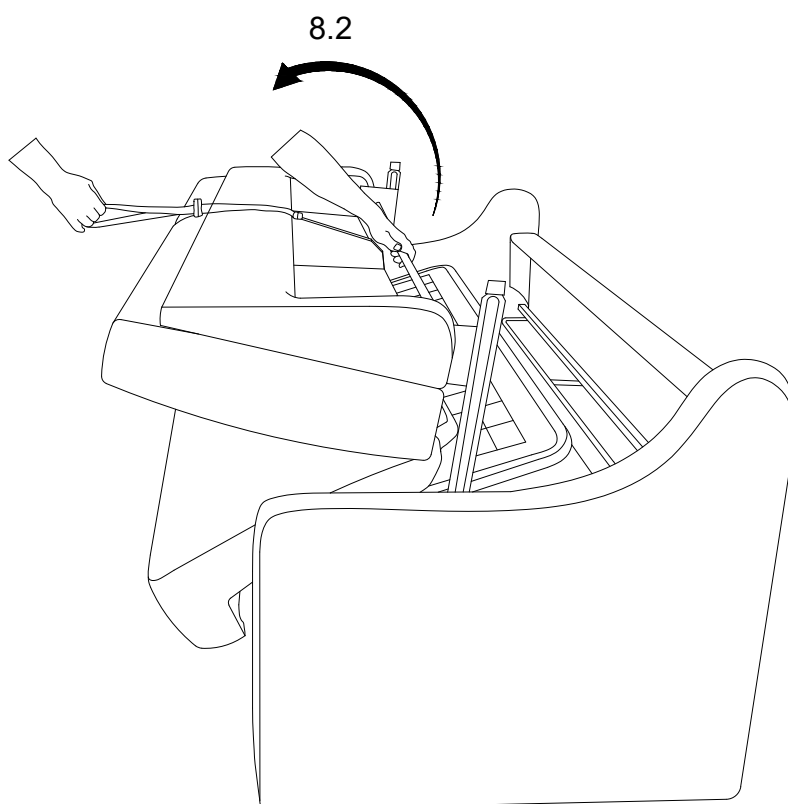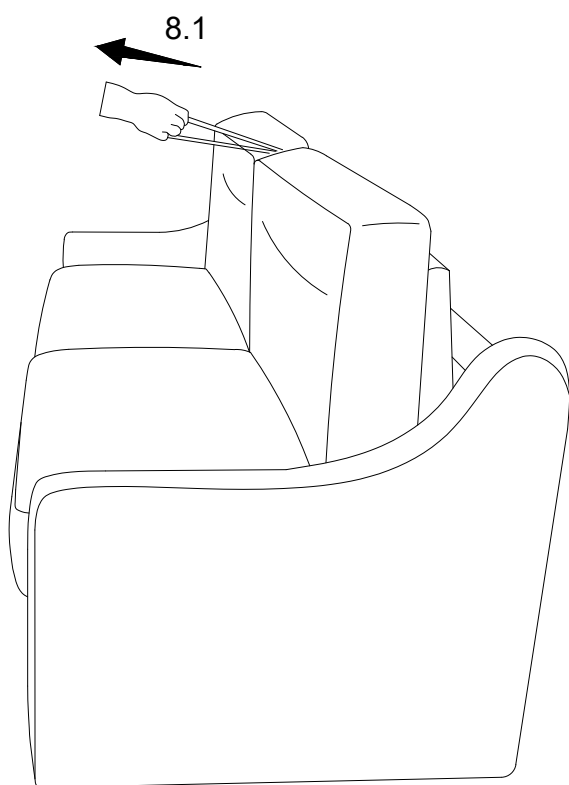

STEP 9

